

Найдите свой Mgate



Устройство А \ Устройство В	Modbus RTU/ ASCII Slave	Modbus RTU/ ASCII Master	PROFIBUS Slave	PROFIBUS Master	J1939	DNP3 Serial Outstation	DNP3 Serial Master	DF1	IEC 60870-5-101 Slave	IEC 60870-5-101 Master	Modbus TCP Server	Modbus TCP Client	Ethernet/IP Adapter	Ethernet/IP Scanner	PROFINET Controller	DNP3 TCP Outstation	DNP3 TCP Client	IEC 60870-5-104 Server	IEC 60870-5-104 Client
Modbus RTU/ ASCII Slave	---	MB3000 ¹	---	4101/5111	5118	---	---	---	---	---	5105	MB3000/ W5x08 ² 5109	5105	5105	5103	---	5109	---	5114
Modbus RTU/ ASCII Master	MB3000 ¹	---	---	4101/5111	5118	---	---	---	---	---	MB3000/ W5x08 ² 5109	5105/ 5109	5105	5105	5103	5109	5109	5114	---
PROFIBUS Slave	---	---	---	---	---	---	---	---	---	---	5101	5101	---	---	5102	---	---	---	---
PROFIBUS Master	4101/5111	4101/5111	---	---	---	---	---	---	---	---	5111	5111	---	5111	5111	---	---	---	---
J1939	5118	5118	---	---	---	---	---	---	---	---	5118	5118	5118	5118	5118	---	---	---	---
DNP3 Serial Outstation	---	---	---	---	---	---	---	---	---	---	---	5109	---	---	---	---	W5x08 ² 5109	---	---
DNP3 Serial Master	---	---	---	---	---	---	---	---	---	---	5109	5109	---	---	---	W5x08 ² 5109	---	---	---
DF1	---	---	---	---	---	---	---	---	---	---	---	---	EIP3000	EIP3000	---	---	---	---	---
IEC 60870-5-101 Slave	---	---	---	---	---	---	---	---	---	---	---	5114	---	---	---	---	---	---	5114
IEC 60870-5-101 Master	---	---	---	---	---	---	---	---	---	---	5114	---	---	---	---	---	---	5114	---
Modbus TCP Server	5105	MB3000/ W5x08 ² 5109	5101	5111	5118	---	5109	---	---	5114	---	---	5105	5105	5103	---	5109	---	5114
Modbus TCP Client	MB3000/ W5x08 ² 5109	5105	5101	5111	5118	5109	5109	---	5114	---	---	5109	5105	5105	5103	---	5109	5114	---
Ethernet/IP Adapter	5105	5105	---	---	5118	---	---	EIP3000	---	---	5105	5105	---	---	---	---	---	---	---
Ethernet/IP Scanner	5105	5105	---	5111	5118	---	---	EIP3000	---	---	5105	5105	---	---	5103	---	---	---	---
PROFINET Controller	5103	5103	5102	5111	5118	---	---	---	---	---	5103	5103	---	5103	---	---	---	---	---
DNP3 TCP Outstation	---	5109	---	---	---	---	W5x08 ² 5109	---	---	---	---	5109	---	---	---	---	---	---	---
DNP3 TCP Client	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---
IEC 60870-5-104 Server	---	5114	---	---	---	---	---	---	---	5114	---	5114	---	---	---	---	---	---	---
IEC 60870-5-104 Client	5114	---	---	---	---	---	---	---	5114	---	5114	---	---	---	---	---	---	---	---

1) Только для MB3270/3660

2) W5x08 = W5108/W5208 (с поддержкой IEEE 802.11a/b/g/n)