

## Использование устройств серии NPort для подключения к последовательной консоли коммутаторов Cisco

### 1) Распиновка кабеля

Pin	Input wire color	Output wire color
1	Orange	Brown
2	Orange/White	Orange
3	Green	Blue
4	Green/White	Green
5	Blue	Blue/White
6	Blue/White	Green/White
7	Brown	Brown/White
8	Brown/White	Orange/White



### 2) Настройки преобразователя серии NPort

← → ↻ 192.168.127.254

**MOXA** www.moxa.com »» Total Solution for Industrial Device Networking

**Main Menu**

- Overview
- Basic Settings
- Network Settings
- Serial Port Settings
  - Port 1
  - Port 2
  - Port 3
  - Port 4
  - Port 5
  - Port 6
  - Port 7
  - Port 8
  - Port 9
  - Port 10
  - Port 11
  - Port 12
  - Port 13
  - Port 14
    - Operation Modes
    - Communication Parameters
    - Data Buffering/Log
    - Modem Settings
    - Cipher Settings

**Operation Modes**

**Port 14**

Application: Reverse Terminal ▼  
Mode: Reverse Telnet ▼  
TCP alive check time: 7 (0 - 99 min)  
Inactivity time: 0 (0 - 99 min)  
TCP port: 4014

**Terminal**

Authentication type: Local ▼  
Try next type on authentication denied: ☐ Enable ☒ Disable  
Map keys <CR-LF>: CR-LF ▼

Apply the above settings to:

☐ P1 ☐ P2 ☐ P3 ☐ P4 ☐ P5 ☐ P6 ☐ P7 ☐ P8  
☐ P9 ☐ P10 ☐ P11 ☐ P12 ☐ P13 ☒ P14 ☐ P15 ☐ P16  
☐ All ports

Submit

← → ↻ 192.168.127.254

**MOXA** www.moxa.com »» Total Solution for Industrial Device Networking

**Main Menu**

- Overview
- Basic Settings
- Network Settings
- Serial Port Settings
  - Port 1
  - Port 2
  - Port 3
  - Port 4
  - Port 5
  - Port 6
  - Port 7
  - Port 8
  - Port 9
  - Port 10
  - Port 11
  - Port 12
  - Port 13
  - Port 14
    - Operation Modes
    - Communication Parameters
    - Data Buffering/Log
    - Modem Settings
    - Cipher Settings
  - Port 15
  - Port 16

**Communication Parameters**

**Port 14**

Port alias:

**Serial Parameters**

Baud rate [Hint]: 9600 ▼  
Data bits: 8 ▼  
Stop bits: 1 ▼  
Parity: None ▼  
Flow control: None ▼  
FIFO: ☒ Enable ☐ Disable  
Interface: RS-232 ▼

Apply the above settings to:

☐ P1 ☐ P2 ☐ P3 ☐ P4 ☐ P5 ☐ P6 ☐ P7 ☐ P8  
☐ P9 ☐ P10 ☐ P11 ☐ P12 ☐ P13 ☒ P14 ☐ P15 ☐ P16  
☐ All ports

Submit

3) Для подключения к последовательной консоли Cisco используем утилиту Putty (можно использовать любую другую терминальную утилиту)

