# TN-5524-8PoE Quick Installation Guide

# Moxa ToughNet Switch

# Edition 3.0, February 2017

### Technical Support Contact Information www.moxa.com/support

#### Moxa Americas:

Toll-free: 1-888-669-2872 Tel: 1-714-528-6777 Fax: 1-714-528-6778

#### Moxa Europe:

Tel: +49-89-3 70 03 99-0 Fax: +49-89-3 70 03 99-99

#### Moxa India:

Tel: +91-80-4172-9088 Fax: +91-80-4132-1045

#### Moxa China (Shanghai office):

Toll-free: 800-820-5036 Tel: +86-21-5258-9955 Fax: +86-21-5258-5505

#### Moxa Asia-Pacific:

Tel: +886-2-8919-1230 Fax: +886-2-8919-1231



P/N: 1802055240012

#### Overview

The ToughNet TN-5524-8PoE series M12 managed Ethernet switches are designed for industrial applications in harsh environments. The TN series switches use M12 and other circular connectors to ensure tight, robust connections, and guarantee reliable operation against environmental disturbances, such as vibration and shock. The TN-5524-8PoE series switches provide 24 Fast Ethernet M12 ports, 8 of which are 10/100BaseT(X) PoE compliant.

TN-5524-8PoE switches provide up to 15.4 watts of power per PoE port, and allow power to be supplied to connected devices (such as surveillance cameras, wireless access points, and IP phones) when AC power is not readily available or is cost-prohibitive to provide locally. Models with an extended operating temperature range of -40 to 75°C are also available. The TN-5524-8PoE series Ethernet switches are compliant with mandatory sections of EN 50155, covering operating temperature, power input voltage, surge, ESD, and vibration, as well as conformal coating and power insulation, making the switches suitable for a variety of industrial applications.

# Package Checklist

Your ToughNet TN-5524-8PoE switch is shipped with the following items. If any of these items is missing or damaged, contact your customer service representative for assistance.

- 1 Moxa ToughNet switch
- M12 to DB9 console port cable
- · 2 protective caps for console and relay output ports
- · Panel mounting kit
- CD-ROM with user's manual, Windows utility, and SNMP MIB file
- · Quick installation guide (printed)
- · Warranty card

#### **Features**

#### Anti-Vibration Circular Connectors for Robust Links

- M12 D-coding 4-pin female connectors for Fast Ethernet 10/100BaseT(X) ports
- M12 A-coding 5-pin male connectors for console and relay output
- · M23 6-pin male connector for power input

#### Isolated Power Input

Supports 24 VDC (16.8 to 30 VDC), isolated

#### High Performance Network Switching Technology

- · IPv6 ready, certified by the IPv6 Logo Committee
- IEEE 1588 PTP (Precision Time Protocol) for the precise time synchronization of networks
- DHCP Option 82 for IP address assignment with different policies
- Modbus/TCP industrial Ethernet protocol
- Turbo Ring, Turbo Chain, and RSTP/STP (IEEE802.1w/D)
- IGMP Snooping and GMRP for filtering multicast traffic from industrial Ethernet protocols
- Port-based VLAN, IEEE802.1Q VLAN, and GVRP protocol to ease network planning
- · QoS (IEEE802.1p/1Q and TOS/DiffServ) to increase determinism

- 802.3ad, LACP for optimum bandwidth utilization
- IEEE802.1X and https/SSL to enhance network security
- SNMP v1/v2c/v3 for different levels of network management
- RMON for efficient network monitoring and proactive capability
- Bandwidth management prevents unpredictable network status
- · Lock port restricts access to authorized MAC addresses only
- Port mirroring for online debugging
- · Automatic warning by exception through email, relay output
- Automatic recovery of connected devices' IP addresses
- Line-swap fast recovery
- LLDP for automatic topology discovery through network management software
- Configurable through Web browser, Telnet/Serial console, and Windows utility

#### Designed for Industry-specific Applications


- Power failure, port break alarm by relay output
- Complies with all EN 50155 mandatory test items\*
- -40 to 75°C operating temperature range (for "-T" models)
- · IP40, rugged high-strength housing
- · Panel mounting mounting installation capability


\*This product is suitable for rolling stock railway applications, as defined by the EN 50155 standard. For a more detailed statement, click here: <a href="https://www.moxa.com/doc/specs/EN 50155">www.moxa.com/doc/specs/EN 50155</a> Compliance.pdf


### **Recommended Optional Accessories**

- CBL-M23(FF6P)/OPEN-BK-100 IP67:
  - 1-meter M23 to 6-pin power cable with IP67-rated female 6-pin M23 connector
- PLG-WPM23-01-IP67:
  - M23 cable connector, female 6-pin, crimp type
- CBL-M12D(MM4P)/RJ45-100 IP67:
  - 1-meter M12-to-RJ45 Cat-5E UTP Ethernet cable with IP67-rated male 4-pin M12 D-coded connector
- CBL-M12(FF5P)/OPEN-100 IP67:
  - 1-meter M12-to-5-pin power cable with IP67-rated female 5-pin M12 A-coded connector
- M12D-4P-IP68:
  - Field-installable M12 D-coded screw-in connector, male 4-pin, IP68-rated
- M12A-5P-IP68:
  - Field-installable M12 A-coded screw-in connector, female 5-pin, IP68-rated
- CAP-M12F-MIP67-PAK04:
  - Caps for M12 D-coded 4-pin male connectors, metal and IP67-rated; 4 pieces in one pack

# TN-5524-8PoE Panel Layouts

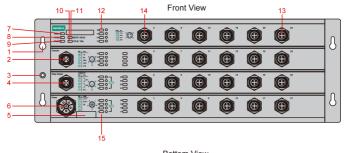


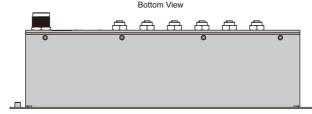

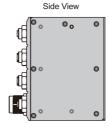

- 1. Screw holes for panel mounting kit
- 2. Console port
- 3. Grounding screw
- 4. Relay output port
- 5. Power input voltage range indication
- 6. Power input port (male 6-pin shielded M23 connector)
- 7. PWR1 LED: for power input 1
- 8. PWR2 LED: for power input 2
- 9. FAULT LED
- 10. MSTR/HEAD LED: for ring master or chain head
- 11. CPLR/TAIL LED: for ring coupler or chain tail
- 12. TP port's 10/100 Mbps LED
- 10/100BaseT(X) port (female 4-pin shielded M12 connector with D coding)
- 10/100BaseT(X) PoE port (female 4-pin shielded M12 connector with D coding)
- 15. LED for PoE port

# **Mounting Dimensions**

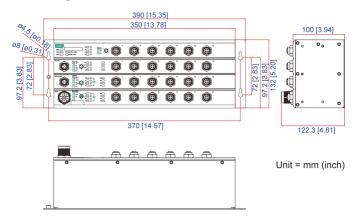

# Panel/Wall Mounting

#### STEP 1:

Mounting the TN-5524-8PoE switches to a wall requires 4 screws. Use the ToughNet switch as a guide to mark the correct positions of the 4 screws.

#### STEP 2:

Use the 4 screws in the panel mounting kit. If you would like to use your own screws, make sure the screw head is **between 6.0 mm and 7.0 mm** in diameter and the shaft is less than **4.0 mm** in diameter, as shown at the right.




Do not screw the screws in all the way—leave a space of about 2 mm to allow room for sliding the ToughNet switch between the wall and the screws.

NOTE Before tightening the screws into the wall, make sure the screw head and shaft size are suitable by inserting the screw through one of the keyhole-shaped apertures of the ToughNet switch.

#### STEP 3:

Once the screws are fixed in the wall, hang the ToughNet switch on the 4 screws through the large opening of the keyhole-shaped apertures, and then slide the switch downwards. Tighten the four screws for added stability.

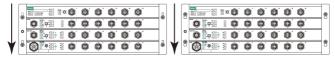

NOTE To provide greater protection from vibrations and shocks, use screws with shaft diameter between 6.0 mm and 7.0 mm, and fix the ToughNet switch onto the wall directly through the large opening of the keyhole-shaped apertures.

# Wiring Requirements



#### WARNING

Turn the power off before disconnecting modules or wires. The correct power supply voltage is listed on the product label. Check the voltage of your power source to make sure you are using the correct voltage. Do NOT use a voltage greater than what is specified on the product label.

These devices must be supplied by a SELV source as defined in the Low Voltage Directive 2006/95/EC and 2004/108/EC.



#### ATTENTION

#### Safety First!

Be sure to disconnect the power cord before installing and/or wiring your Moxa switch.

This device has UL508 approval. Use copper conductors only, 60/75°C, and tighten to 4.5 pound-inches. For use in pollution degree 2 environments.



#### **ATTENTION**

#### Safety First!

Observe all electrical codes dictating the maximum current allowable for each wire size. If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

Be sure to read the following guidelines:


 Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.

**NOTE** Do not run signal or communications wiring and power wiring through the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.

- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
- · Keep input wiring and output wiring separated.
- We strongly advise that you label wiring for all devices in the system.

# **Grounding the ToughNet Switch**

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the grounding screw to the grounding surface prior to connecting devices.

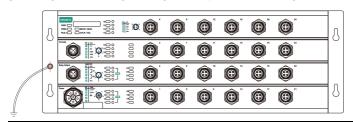




# **ATTENTION**

This product is intended to be mounted to a well-grounded mounting surface such as a metal panel.

# Connecting the Power Supplies

The ToughNet TN-5524-8PoE series switches support one power supply. The M23 6-pin male connector on the TN-5524-8PoEfront panel is used for the power input.

# Pinouts for the power input port on the TN-5524-8PoE

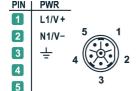

# Pinouts for the power input port on the TN-5524-8PoE

Pin	Description Usage		
		Connect "PWR1 Live / DC +" to the Live	
1	PWR1 Live / DC +	terminal when using an AC power source or	
		to the positive (+) terminal when using a DC	
		power source.	
3	PWR1 Neutral / DC -	Connect "PWR1 Neutral / DC -" to the	
		Neutral terminal when using an AC power	
		source or to the negative (-) terminal when	
		using a DC power source.	
	Chassis Ground	Connect the "Chassis Ground" to the safety	
		ground terminal for AC inputs or to the	
		equipment ground bus for DC inputs.	

#### STEP 1:

Plug your power cord connector to the power input port of the TN-5524-8PoE switch.

#### STEP 2:

Screw the nut on your power cord connector to the power input connector on the switch to ensure a tight connection.


#### **ATTENTION**

Before connecting the TN-5524-8PoEto the power input, make sure the power source voltage is stable.

# **Connecting the Relay Outputs**

Each TN-5524-8PoE switch has two sets of relay outputs—relay output 1 and relay output 2.The M12 A-coded 5-pin male connector on the TN-5524-8PoE's front panel is used for the two relay outputs. Use a power cord with an M12 A-coded 5-pin female connector to connect the relay contacts. You can purchase an M12 power cable from Moxa; the model number is CBL-M12 (FF5P)/OPEN-100 IP67.

#### Pinouts for the relay output port on TN-5524-8PoE

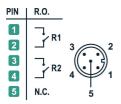

N.C.: Not Connected

#### FAULT:

The two sets of relay contacts of the M12 A-coded 5-pin male connector are used to detect user-configured events. The two wires attached to the fault contacts form an open circuit when a user-configured event is triggered. If a user-configured event does not occur, the fault circuit remains closed.


# **Connecting the Data Lines**

#### 10/100BaseT(X) Ethernet Port Connection

All TN-5524-8PoE models have 24 10/100BaseT(X) Ethernet ports (4-pin shielded M12 connector with D coding). The 10/100TX ports located on the TN-5524-8PoEfront panel are used to connect to Ethernet-enabled devices. Most users configure these ports for Auto MDI/MDI-X mode, in which case the port's pinouts are adjusted automatically depending on the type of Ethernet cable used (straight-through or cross-over), and the type of device (NIC-type or HUB/Switch-type) connected to the port.

In what follows, we give pinouts for both MDI (NIC-type) ports and MDI-X (HUB/Switch-type) ports. We also give cable wiring diagrams for straight-through and cross-over Ethernet cables.


#### Pinouts for the 10/100BaseT(X) Ports on the TN-5524-8PoE

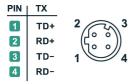

Housing: Shield

#### Pinouts for the RJ45 (8-pin) Port

8-pin RJ45

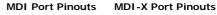


Ţ	T	T	T	T	T	T	T 8	
	1	_				ſ	_	


Pin	Signal
1	Tx+
2	Tx-
3	Rx+
6	Rx-

Pin	Signal
1	Rx+
2	Rx-
3	Tx+
6	Tx-


# M12 (4-pin, M) to M12 (4-pin, M) Cross-Over Cable Wiring

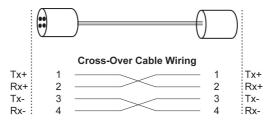


#### M12 (4-pin, M) to M12 (4-pin, M) Straight-Trough Cable Wiring

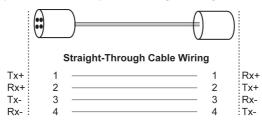

#### M12 (4-pin, M) to RJ45 (8-pin) Cross-Over Cable Wiring

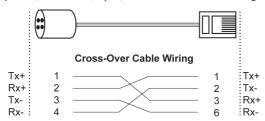

#### M12 (4-pin, M) to RJ45 (8-pin) Straight-Trough Cable Wiring

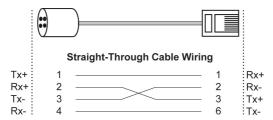

# **LED Indicators**

Several LED indicators are located on the ToughNet switch's front panel. The function of each LED is described in the table below.

PWR1 AMBER  ON Power is being supplied to power input PWR1.  OFF Power is not being supplied to power input PWR2.  ON Power is not being supplied to power input PWR2.  OFF Power is not being supplied to power input PWR2.  OFF Power is not being supplied to power input PWR2.  When the corresponding PORT alarm is enabled, and a user-configured event intriggered.  When the corresponding PORT alarm is enabled and a user-configured event in triggered, or when the corresponding PORT alarm is enabled and a user-configured event in this Turbo Ring, or the Head of this Turbo Chain.  When the TN switch is either the Master of this Turbo Ring, or the Head of this Turbo Ring and the Turbo Ring is broken, or it is Chain Head of this Turbo Chain is broken.  When the TN switch is neither the Master of this Turbo Chain.  When the TN switch is neither the Master of this Turbo Chain.  When the TN switch is neither the coupling function to form a back-up pat in this Turbo Ring, or it is the Tail of thi Turbo Chain.  Blinking When the TN switch disables the coupling function of Turbo Ring, or it is not the Tail of the Turbo Chain.  Ports LEDs  ON TP port's 10 Mbps link is active.  Blinking Data is being transmitted at 10 Mbps. Off TP port's 100 Mbps link is inactive.  Blinking Data is being transmitted at 100 Mbps. off TP port's 100 Mbps link is inactive.	LED	Color	State	Description		
PWR1 AMBER ON Power is being supplied to power input PWR1.  OFF Power is not being supplied to power input PWR2.  ON Power is being supplied to power input PWR2.  OFF Power is not being supplied to power input PWR2.  OFF Power is not being supplied to power input PWR2.  When the corresponding PORT alarm is enabled, and a user-configured event is triggered.  When the corresponding PORT alarm is enabled and a user-configured event is not triggered, or when the corresponding PORT alarm is disabled.  When the TN switch is either the Maste of this Turbo Ring, or the Head of this Turbo Ring, or the Head of this Turbo Ring and the Turbo Ring is broken, or it is Chain Head of this Turbo Chain and the Turbo Ring, nor the Head of this Turbo Ring, or it is the Tail of thi Turbo Chain.  When the TN switch is neither the Master of this Turbo Ring, or it is the Tail of thi Turbo Chain.  When the TN switch is neither the Master of this Turbo Ring, or it is the Tail of thi Turbo Chain.  When the TN switch enables the coupling function to form a back-up pat in this Turbo Ring, or it is the Tail of thi Turbo Chain.  Blinking When the Turbo Chain is down.  When the TN switch disables the coupling function of Turbo Ring, or it is not the Tail of the Turbo Chain.  Ports LEDs  ON TP port's 10 Mbps link is active.  Blinking Data is being transmitted at 10 Mbps. Off TP port's 100 Mbps link is inactive.  Blinking Data is being transmitted at 100 Mbps off TP port's 100 Mbps link is inactive.	LLD	00101		·		
PWR2 AMBER  OFF OFF OFF ON Power is not being supplied to power input PWR2.  OFF OFF OFF OFF OFF OFF OFF OFF OFF O	DW/D1	AMBER		Power is being supplied to power input		
PWR2  AMBER  OFF  Power is not being supplied to power input PWR2.  When the corresponding PORT alarm is enabled, and a user-configured event it triggered.  When the corresponding PORT alarm is enabled and a user-configured event is not triggered, or when the corresponding PORT alarm is enabled and a user-configured event is not triggered, or when the corresponding PORT alarm is disabled.  When the TN switch is either the Master of this Turbo Ring, or the Head of this Turbo Chain.  When the TN switch is Ring Master of this Turbo Ring and the Turbo Ring is broken, or it is Chain Head of this Turbo Chain and the Turbo Chain is broken.  When the TN switch is neither the Master of this Turbo Chain.  When the TN switch enables the coupling function to form a back-up pat in this Turbo Ring, or it is the Tail of thi Turbo Chain.  Blinking When the Turbo Chain is down.  When the TN switch disables the coupling function of Turbo Ring, or it is not the Tail of the Turbo Chain.  Ports LEDs  ON TP port's 10 Mbps link is active.  Blinking Data is being transmitted at 10 Mbps.  Off TP port's 100 Mbps link is inactive.  Power is being supplied to a Powered	FWKI		OFF	input PWR1		
FAULT  RED  OFF  ON  When the corresponding PORT alarm is enabled, and a user-configured event in triggered.  When the corresponding PORT alarm is enabled and a user-configured event is not triggered, or when the corresponding PORT alarm is enabled and a user-configured event is not triggered, or when the corresponding PORT alarm is disabled.  When the TN switch is either the Master of this Turbo Ring, or the Head of this Turbo Chain.  When the TN switch is Ring Master of this Turbo Ring and the Turbo Ring is broken, or it is Chain Head of this Turbo Chain and the Turbo Chain is broken.  When the TN switch is neither the Master of this Turbo Ring, nor the Head of this Turbo Chain.  When the TN switch enables the coupling function to form a back-up pat in this Turbo Ring, or it is the Tail of this Turbo Chain.  Blinking  When the Turbo Chain is down.  When the TN switch disables the coupling function of Turbo Ring, or it is not the Tail of the Turbo Chain.  Ports LEDs  ON  TP port's 10 Mbps link is active.  Blinking  On TP port's 100 Mbps link is inactive.  Power is being supplied to a Powered	DIAZDO	AMBER	ON	PWR2.		
FAULT  RED  OFF  OFF  OFF  OFF  OFF  OFF  OFF  O	FVVKZ		OFF			
MSTR/ HEAD  GREEN  GREE		RED	ON	55		
MSTR/ HEAD  GREEN  GREEN  Blinking  Blinking  Blinking  Blinking  Blinking  Blinking  GREEN  HEAD  GREEN  Blinking  Blinking  Blinking  Blinking  Blinking  Blinking  Blinking  GREEN  AMBER  TP  (10/100M)  GREEN  GREEN  GREEN  GREEN  Blinking  ON  ON  Don'  D	FAULT		OFF			
MSTR/ HEAD  GREEN  Blinking  When the TN switch is Ring Master of this Turbo Ring and the Turbo Ring is broken, or it is Chain Head of this Turbo Chain and the Turbo Chain is broken.  When the TN switch is neither the Master of this Turbo Ring, nor the Head of this Turbo Chain.  When the TN switch enables the coupling function to form a back-up pat in this Turbo Ring, or it is the Tail of thi Turbo Chain.  Blinking When the TN switch disables the coupling function of Turbo Ring, or it is not the Tail of the Turbo Chain.  Ports LEDs  ON TP port's 10 Mbps link is active.  Blinking Data is being transmitted at 10 Mbps off TP port's 100 Mbps link is inactive.  Power is being sumplied to a Powered		GREEN	ON	G.		
CPLR/ TAIL  GREEN  GREE			Blinking	When the TN switch is Ring Master of this Turbo Ring and the Turbo Ring is broken, or it is Chain Head of this Turbo		
CPLR/ TAIL  GREEN  Blinking  When the Turbo Chain is down.  When the TN switch disables the coupling function of Turbo Ring, or it is not the Tail of the Turbo Chain.  Ports LEDs  ON  TP port's 10 Mbps link is active.  Blinking  Data is being transmitted at 10 Mbps.  Off  TP port's 10 Mbps link is inactive.  Blinking  GREEN  GREEN  GREEN  Blinking  Data is being transmitted at 100 Mbps off  TP port's 100 Mbps link is inactive.  Blinking Data is being transmitted at 100 Mbps off  TP port's 100 Mbps link is inactive.  Power is being sumplied to a Powered			OFF	Master of this Turbo Ring, nor the Head		
TAIL  Blinking When the Turbo Chain is down.  When the TN switch disables the coupling function of Turbo Ring, or it is not the Tail of the Turbo Chain.  Ports LEDs  ON TP port's 10 Mbps link is active.  Blinking Data is being transmitted at 10 Mbps.  Off TP port's 10 Mbps link is inactive.  On TP port's 10 Mbps link is active.  Blinking Data is being transmitted at 100 Mbps off TP port's 100 Mbps link is inactive.  Power is being sumplied to a Powered	CPLR/	CDEEN	ON	coupling function to form a back-up path in this Turbo Ring, or it is the Tail of this		
Ports LEDs  ON TP port's 10 Mbps link is active.  Blinking Data is being transmitted at 10 Mbps.  Off TP port's 10 Mbps link is inactive.  On TP port's 100 Mbps link is inactive.  Blinking Data is being transmitted at 100 Mbps off TP port's 100 Mbps link is inactive.  Blinking Data is being transmitted at 100 Mbps off TP port's 100 Mbps link is inactive.  Power is being sumplied to a Powered	TAIL			When the TN switch disables the coupling function of Turbo Ring, or it is		
TP  (10/100M)  AMBER  AMBER  Blinking Data is being transmitted at 10 Mbps.  Off TP port's 10 Mbps link is inactive.  On TP port's 100 Mbps link is active.  Blinking Data is being transmitted at 100 Mbps  off TP port's 100 Mbps link is inactive.  Power is being sumplied to a Powered.			Po			
TP (10/100M)  AMBER Blinking Data is being transmitted at 10 Mbps.  Off TP port's 10 Mbps link is inactive.  On TP port's 100 Mbps link is active.  Blinking Data is being transmitted at 100 Mbps  off TP port's 100 Mbps link is inactive.  Power is being supplied to a Powered.						
(10/100M)  GREEN  On TP port's 100 Mbps link is active.  Blinking Data is being transmitted at 100 Mbps  off TP port's 100 Mbps link is inactive.  Power is being supplied to a Powered		AMBER	Blinking	·		
GREEN Blinking Data is being transmitted at 100 Mbps  off TP port's 100 Mbps link is inactive.  Power is being supplied to a Powered	TP		Off	TP port's 10 Mbps link is inactive.		
off TP port's 100 Mbps link is inactive.	(10/100M)		On	TP port's 100 Mbps link is active.		
Power is being supplied to a Powered		GREEN		Data is being transmitted at 100 Mbps.		
Power is being supplied to a Powered			off	·		
On Device (PD)		<b>E</b> AMBER	On	3 11		
POF LAMBER	PoE		Off	Power is not being supplied to a Powered		

# **Specifications**

Technology	
Standards	IEEE 802.3 for 10BaseT
otariuai us	IEEE 802.3u for 100BaseT(X)
	IEEE 802.af PoE
	IEEE 802.3x for Flow Control
	IEEE 802.1D for Spanning Tree Protocol
	IEEE 802.1w for Rapid STP
	IEEE 802.1Q for VLAN Tagging
	IEEE 802.1p for Class of Service
	IEEE 802.1X for Authentication
	IEEE 802.3ad for Port Trunk with LACP
Protocols	IGMP v1/v2 device, GMRP, GVRP, SNMP
Protocois	v1/v2C/v3, DHCP Server/Client, DHCP Option
	66/67/82, BootP, TFTP, SNTP, SMTP, RARP,
	RMON, HTTP, HTTPS, Telent, SSH, Syslog, LLDP,
MID	IEEE 1588 PTP, Modbus/TCP, IPv6
MIB	MIB-II, Ethernet-like MIB, P-BRIDGE MIB,
	Q-BRIDGE MIB, Bridge MIB, RSTP MIB, RMON
Fl. O. I.I.	MIB Group 1, 2, 3, 9
Flow Control	IEEE802.3x flow control, back pressure flow
0 11 1 0 11	control
Switch Properties	L.
Priority Queues	4
Max. Number of	64
Available VLANs	1415 4 1 4004
VLAN ID Range	VID 1 to 4094
IGMP Groups	256
Interface	
Fast Ethernet	Front cabling, M12 connector, 10/100BaseT(X)
	auto negotiation speed, F/H duplex mode, and
	auto MDI/MDI-X connection
Console Port	M12 A-coding 5-pin male connector
System LED Indicators	PWR1, PWR2, FAULT, MSTR/HEAD, CPLR/TAIL
Port LED Indicators	10/100M (Fast Ethernet port)
Alarm Contact	Two relay outputs in one M12 A-coding 5-pin
	male connector with current carrying capacity of
	3 A @ 30 VDC
Power Requirements	
Input Voltage	24 VDC (16.8 to 30 VDC)
Input Current	Max. 8.4 A @ 24 VDC
Connection	M23 6-pin male connector
Overload Current	Present
Protection	
Reverse Polarity	Present
Protection	
Physical Characteristi	cs
Housing	Metal, IP40 protection (with protective caps on
	unused ports)
Dimensions (W × H × D)	390 x 132 x 122.3 mm (15.35 x 5.20 x 4.81 in)
Weight	TN-5524-8PoE Series: 5330 g
Installation	Panel mounting
	1. =

Environmental Limits				
Operating Temperature	Wide Temp. Models: -40 to 75°C (-40 to 167°F)			
Storage Temperature	-40 to 85°C (-40 to 185°F)			
Operating Humidity 5 to 95% (non-condensing)				
Regulatory Approvals				
Safety	UL/cUL 508			
EMI	FCC Part 15 Subpart B Class A, EN 55032 Class A			
EMS	IEC 61000-4-2 ESD: Contact: 6 kV; Air: 8 kV			
	IEC 61000-4-3 RS: 80 MHz to 1 GHz: 20 V/m			
	IEC 61000-4-4 EFT: Power: 2 kV; Signal: 2 kV			
	IEC 61000-4-5 Surge: Power: 2 kV; Signal: 2 kV			
	IEC 61000-4-6 CS: 10 V			
	IEC 61000-4-8			
Rail Traffic	(for panel-mounting installations)			
	EN 50155*, EN 50121-4, EN 45545-2			
*This product is suitable	for rolling stock railway applications, as defined			
by the EN 50155 standard. For a more detailed statement, click here:				
www.moxa.com/doc/spe	ecs/EN_50155_Compliance.pdf			
Shock	EN 50155, IEC61373			
Freefall	IEC60068-2-32			
Vibration	EN 50155, IEC61373			
Note: Please check Moxa's website for the most up-to-date certification				
status.				
MTBF (mean time between failures)				
Time	663,533 hrs.			
Standard	Telcordia SR332			
Warranty				
Time Period	5 years			

See www.moxa.com/warranty

Details